

POSCA

 
WATER-BASED PAINT MARKER

POSCA PAINT MARKERS FEATURE QUICK DRYING, WATER-BASED PIGMENT INK. THEY ARE PERMANENT ON POROUS SURFACES, REMOVABLE ON GLASS AND DOES NOT BLEED THROUGH PAPER.

MATERIALS

TESTED ON OVER 50 MATERIALS & SURFACES

POSCA CAN BE USED ON ALMOST ANY SURFACE SO YOU CAN EXPRESS YOUR CREATIVITY FREELY.

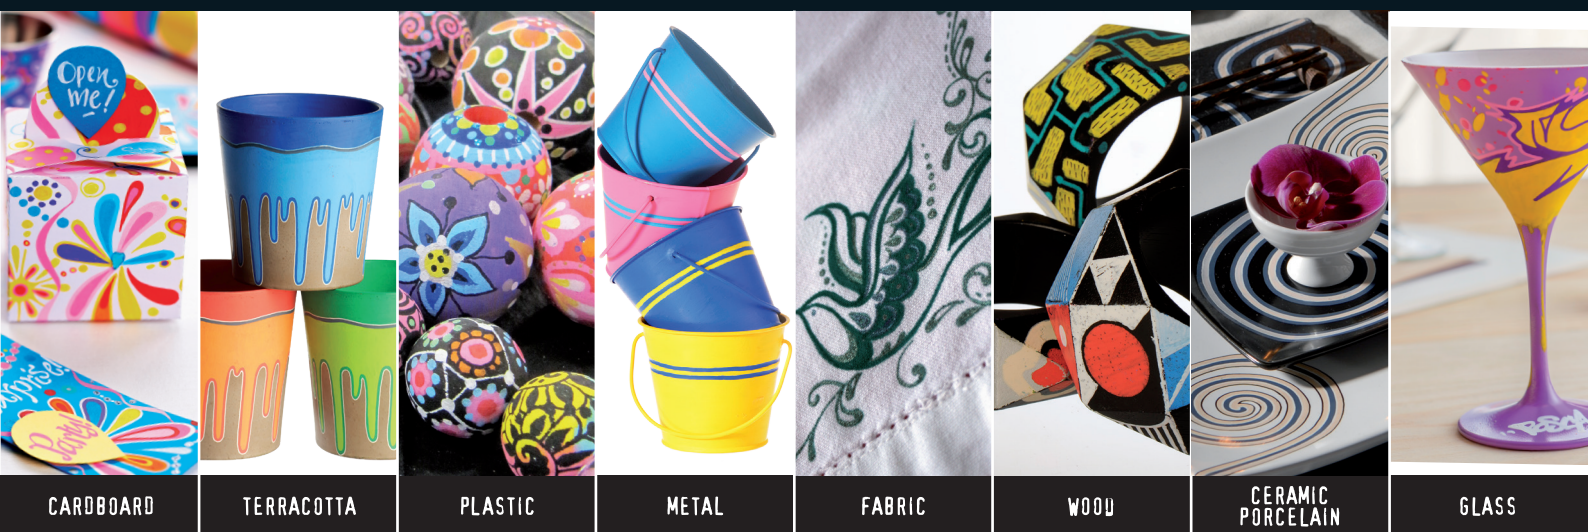

CARDBOARD

TERRACOTTA

PLASTIC

METAL

FABRIC

WOOD

CERAMIC
PORCELAIN

GLASS

TO FIX

Spray with clear varnish.



Bake in the oven at 220°C for 45 minutes. Spray with clear varnish.



Spray with clear varnish.



Spray with clear varnish. 2 or 3 layers for outdoor use.



Let your design dry completely. Then, turn the cloth inside out and iron it without steam.



TO FIX

Spray with clear varnish. 2 layers.



Ceramic :
220°C oven or varnish.
Porcelain :
Bake in the oven at 160°C for 45 minutes.
Water or glue varnish



 
Bake in the oven at 160°C for 45 minutes. Spray with clear varnish.



INSTRUCTIONS



1. Shake the marker vigorously, with the cap securely attached.

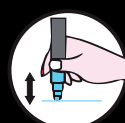

2. On a sheet, press down the tip several times to start the paint flowing. Replace the cap tightly after use.

The ball inside the barrel mixes the paint, giving an even consistency. The cap provides a perfect seal ensuring protection and longevity of the tip. Store in horizontal position.

FOR MORE INFORMATION PLEASE VISIT WWW.POSCA.COM/AU